


Step 2

Undo the brake line where the flexible hose meets the steel brake pipe and quickly install the brake line extender "Item B" onto the steel brake pipe and the other end to the flexible brake hose. Tighten both ends of the brake extension pipe and check for leaks.

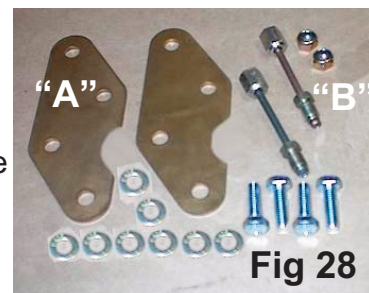

Step 3


Mount the original brake line bracket to the dropping plate added in Step 1 using the original nut and tighten.

Step 4

Repeat the brake line modifications to the other side.

Step 5

Bleed the full brake system as per owners workshop manual.

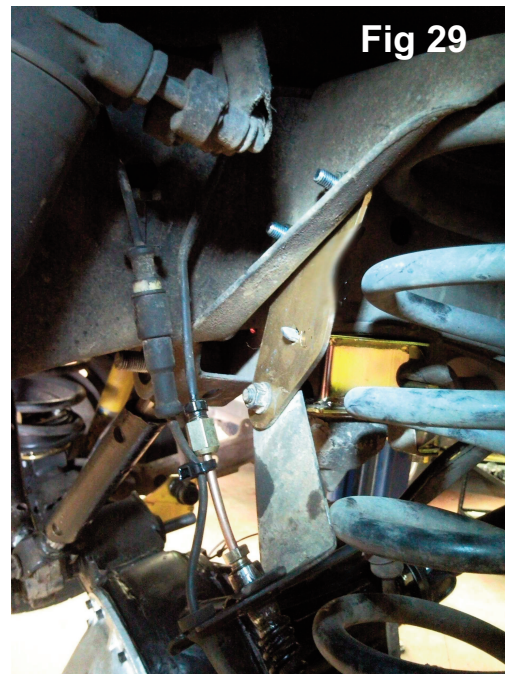

Torque Description

	Nm
All supplied 10mm bolts	60
All supplied 12mm bolts	80
Watts link to chassis "new supplied"	140
Watts link to chassis "original"	140
Panhard rod bolt to front diff	140
Front / rear spring seat	100
Shocker bolts "rear"	100
Sway bar / ACE sway bar pivot bolt	100
SLS sensor arm	25

Thankyou for purchasing a White Tiger Offroad Product and hope it meets to your satisfaction.

If you are having problems fitting this kit please contact the place of purchase or White Tiger Offroad Products
via Les Richmond Automotive, Melbourne Australia
Phone (03) 9464 4094. Fax (03) 9464 4095.
info@lrautomotive.com.au.